


MAINTENANCE MANUAL

AQUILA AT01 (A210)

Doc.-No. MM-AT01-1020-100

Issued: September, 2001

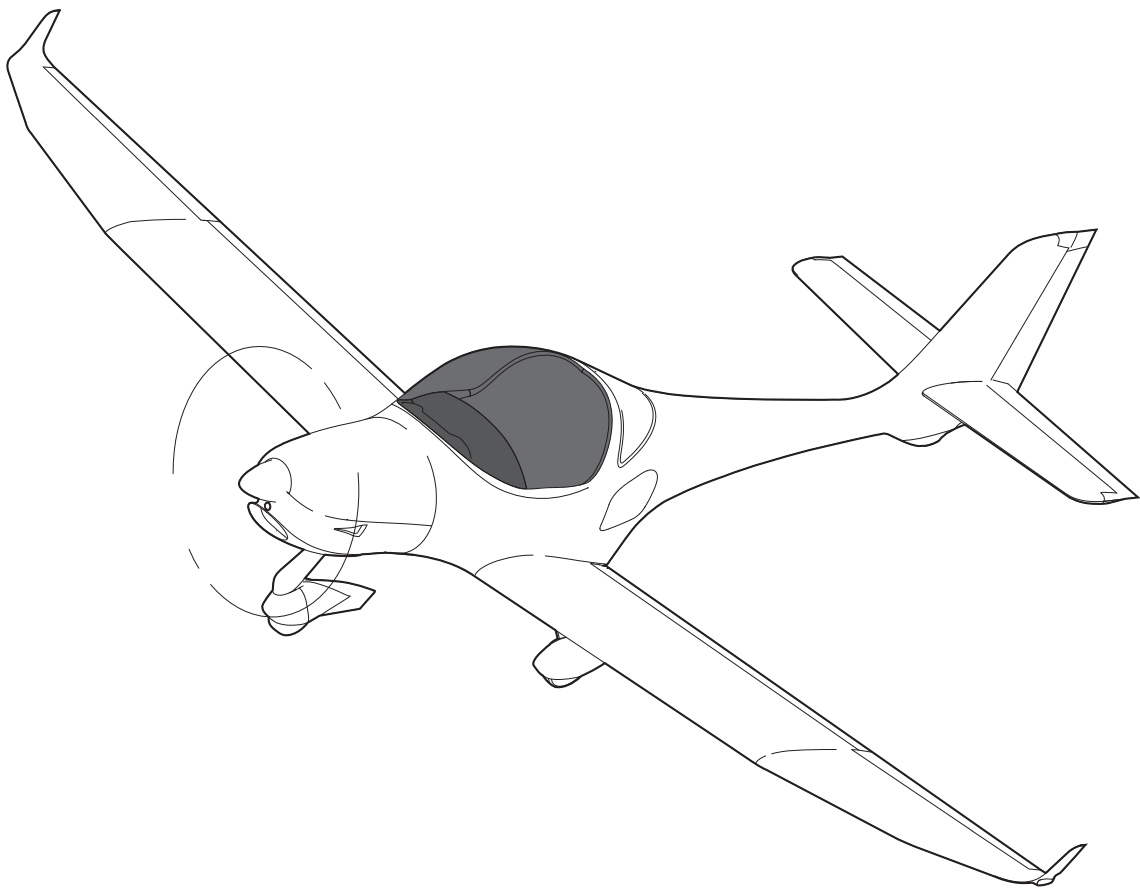

This document is protected by copyright. All associated rights, in particular those of translation, reprinting, reproduction by photo mechanical or similar means and storing in data processing facilities in whole or part are reserved. The technical content of this document is approved under the authority of DOA ref. EASA.21J.025.

AQUILA Aviation GmbH
Flugplatz
14959 Schönhagen

Phone: ++49 33 731 707 - 0
Fax: ++49 33 731 707 - 11
e-mail: kontakt@aquila-aviation.de

 


TABLE OF CONTENTS

Cha/Sec/Sub	<u>Title</u>
	TABLE OF CONTENTS
	INTRODUCTION
	LIST OF EFFECTIVE CHAPTERS
04	AIRWORTHINESS LIMITATIONS
04-00-00	Airworthiness Limitations - General
05	TIME LIMITS / MAINTENANCE CHECKS
05-00-00	Time Limits / Maintenance Checks - General
05-10-00	Component Time Limits
05-20-00	Scheduled Maintenance Checks
05-30-00	Daily Inspections
05-50-00	Unscheduled Maintenance Checks
06	DIMENSIONS AND AREAS
06-00-00	Dimensions and Areas - General
06-10-00	Aircraft Dimensions and Areas
06-20-00	Aircraft Zoning
06-30-00	Access/Inspection Plates
07	LIFTING AND SHORING
07-00-00	Lifting and Shoring - General
07-10-00	Jacking
08	LEVELING AND WEIGHING
08-00-00	Leveling and Weighing - General
08-10-00	Weighing
08-20-00	Leveling
09	TOWING AND TAXIING
09-00-00	Towing and Taxiing - General
09-10-00	Towing
09-20-00	Taxiing
10	PARKING, MOORING, STORAGE AND RETURN TO SERVICE
10-00-00	Parking, Mooring, Storage and Return to Service - General
10-10-00	Parking
10-11-00	Storage
10-20-00	Mooring
10-30-00	Return to Service
11	PLACARDS AND MARKINGS
11-00-00	Placards and Markings - General

TABLE OF CONTENTS (Cont.)

Cha/Sec/Sub	<u>Title</u>
11-20-00	Exterior Placards and Markings
11-30-00	Interior Placards and Markings
12	SERVICING
12-00-00	Servicing - General
12-10-00	Replenishing - Description
12-11-00	Fuel - Servicing
12-12-00	Engine Oil - Servicing
12-13-00	Induction Air Filter - Servicing
12-14-00	Cooling System - Servicing
12-15-00	Brake System - Servicing
12-16-00	Tires - Servicing
12-17-00	Battery - Servicing
12-20-00	Scheduled Servicing - Description
12-21-00	Lubricants - Description
12-22-00	Lubrication - Servicing
12-23-00	Aircraft Exterior - Cleaning and Care
12-24-00	Aircraft Interior - Cleaning and Care
12-30-00	Unscheduled Servicing
20	STANDARD PRACTICES AIRFRAME
20-00-00	Standard Practices Airframe - General
20-10-00	Fastener Identification and Torque Data
20-11-00	Conversion Data
21	VENTILATION AND HEATING
21-00-00	Ventilation and Heating - General
21-20-00	Fresh Air Distribution - Description
21-20-00	Fresh Air Distribution - Maintenance Practices
21-40-00	Heating - Maintenance Practices
23	COMMUNICATIONS
23-00-00	Communications - General
23-10-00	Speech Communications - Description
23-10-00	Speech Communications - Maintenance Practices
23-50-00	Audio Integrating - Maintenance Practices
24	ELECTRICAL POWER
24-00-00	Electrical Power - General
24-00-00	Electrical Power - Troubleshooting
24-20-00	Alternator System - Description
24-20-00	Alternator System - Maintenance Practices
24-30-00	Battery System - Description

TABLE OF CONTENTS (Cont.)

Cha/Sec/Sub	<u>Title</u>
24-30-00	Battery - Maintenance Practices
24-40-00	External Power - Maintenance Practices
24-60-00	Electrical Load Distribution - Description
24-61-00	Circuit Breaker - Maintenance Practices
25	EQUIPMENT / FURNISHINGS
25-00-00	Equipment / Furnishings - General
25-10-00	Seats - Maintenance Practices
25-11-00	Restraint System - Maintenance Practices
25-21-00	Cabin Interior - Maintenance Practices
25-50-00	Cargo Tie Downs - Maintenance Practices
25-60-00	Emergency - Description
25-60-00	Emergency - Maintenance Practices
25-60-01	Fire Extinguisher - Maintenance Practices
27	FLIGHT CONTROLS
27-00-00	Flight Controls - General
27-10-00	Aileron Control System - Description
27-10-00	Aileron Control System - Maintenance Practices
27-20-00	Rudder Control System - Description
27-20-00	Rudder Control System - Maintenance Practices
27-30-00	Elevator Control System - Description
27-30-00	Elevator Control System - Maintenance Practices
27-31-00	Elevator Trim Control System - Description
27-31-00	Elevator Trim Control System - Maintenance Practices
27-50-00	Flap Control System - Description
27-50-00	Flap Control System - Maintenance Practices
28	FUEL
28-00-00	Fuel - General
28-10-00	Fuel Storage - Description
28-10-00	Fuel Storage - Maintenance Practices
28-20-00	Fuel Distribution - Description
28-20-00	Fuel Distribution - Maintenance Practices
28-40-00	Fuel Indicating - Description
28-40-00	Fuel Indicating - Maintenance Practices
31	INDICATING / RECORDING SYSTEMS
31-00-00	General
31-10-00	Instrument Panel - Maintenance Practices
31-30-00	Recorders - Maintenance Practices

TABLE OF CONTENTS (Cont.)

Cha/Sec/Sub	<u>Title</u>
32	LANDING GEAR
32-00-00	Landing Gear - General
32-10-00	Main Gear - Description
32-10-00	Main Gear - Maintenance Practices
32-20-00	Nose Gear - Description
32-20-00	Nose Gear - Maintenance Practices
32-40-00	Wheels and Brakes - Description
32-40-00	Wheels and Brakes - Maintenance Practices
33	LIGHTS
33-00-00	Lights - General
33-40-00	Exterior Lights - Maintenance Practices
34	NAVIGATION
34-00-00	Navigation - General
34-10-00	Pitot / Static System - Description
34-10-00	Pitot / Static System - Maintenance Practices
34-11-00	Stall Warning System - Description
34-11-00	Stall Warning System - Maintenance Practices
34-20-00	Attitude and Direction - Maintenance Practices
34-21-00	Integrated Flight System - Maintenance Practices
34-40-00	Independent Position Determining - Maintenance Practices
34-41-00	FLARM Collision Warning System - Maintenance Practices
34-50-00	Dependent Position Determining - Maintenance Practices
51	STRUCTURES
51-00-00	Structures - General
51-10-00	Fiberglass Laminate Structures - Maintenance Practices
51-20-00	Repair of Fiberglass Laminate Components
52	DOORS
52-00-00	Doors - General
52-10-00	Canopy - Maintenance Practices
53	FUSELAGE
53-00-00	Fuselage - General
53-10-00	Fuselage - Main Frame
53-10-00	Fuselage - Maintenance Practices
55	STABILIZERS
55-00-00	Stabilizers - General
55-10-00	Horizontal Stabilizer - Maintenance Practices
55-20-00	Elevator - Maintenance Practices

TABLE OF CONTENTS (Cont.)


<u>Cha/Sec/Sub</u>	<u>Title</u>
55-30-00	Vertical Stabilizer - Maintenance Practices
55-40-00	Rudder - Maintenance Practices
56	WINDOWS
56-00-00	Windows - General
56-10-00	Flight Compartment Windows - Maintenance Practices
57	WINGS
57-00-00	Wings - General
57-10-00	Wings - Maintenance Practices
57-50-00	Control Surfaces - Maintenance Practices
61	PROPELLER
61-00-00	Propeller - General
61-00-00	Propeller - Troubleshooting
61-10-00	Propeller Assembly - Maintenance Practices
61-20-00	Propeller Control - Maintenance Practices
71	POWER PLANT
71-00-00	Power Plant - General
71-00-01	Engine Description
71-00-01	Troubleshooting - ROTAX Engines 912S
71-00-01	ROTAX Engines 912S - Maintenance Practices
71-10-00	Cowling - Maintenance Practices
71-20-00	Engine Mount - Maintenance Practices
71-60-00	Air Induction System - Maintenance Practices
74	IGNITION SYSTEM
74-00-00	Ignition System - General
74-10-00	Ignition System - Maintenance Practices
75	COOLING SYSTEM
75-00-00	Cooling System - General
75-10-00	Engine Cooling System - Maintenance Practices
75-10-01	Winterization Kit - Maintenance Practices
76	ENGINE CONTROLS
76-00-00	Engine Controls - General
76-10-00	Engine Controls - Maintenance Practices
77	ENGINE INDICATING
77-00-00	Engine Indicating - General
77-10-00	Power - Maintenance Practices
77-20-00	Temperature - Maintenance Practices


TABLE OF CONTENTS (Cont.)

<u>Cha/Sec/Sub</u>	<u>Title</u>
78	EXHAUST
78-00-00	Exhaust - General
78-10-00	Exhaust - Maintenance Practices
79	OIL
79-00-00	Oil - General
79-10-00	Oil Tank - Maintenance Practices
79-20-00	Oil Cooler - Maintenance Practices
79-30-00	Oil Temperature Measuring System - Maintenance Practices
79-31-00	Oil Pressure Measuring System - Maintenance Practices
80	STARTING
80-00-00	Starting - General
80-10-00	Starter - Maintenance Practices
91	CHARTS AND DIAGRAMS
91-00-00	Charts and Diagrams - General

RECORD OF REVISIONS

Revision Number	Date of Revision	Date Inserted	By	Revision Number	Date of Revision	Date Inserted	By
1	01.10.01						
2	29.10.01						
3	05.11.01						
4	07.11.01						
5	26.11.01						
6	01.03.02						
7	15.03.02						
8	22.03.02						
9	14.05.02						
10	18.05.02						
11	08.07.02						
12	26.04.05						
13	28.10.05						
14	18.01.06						
15	30.04.08						
16	15.09.09						
17	02.03.10						
18	21.06.10						
19	25.11.10						
20	24.02.11						
21	05.11.12						
22	19.03.13						
23	19.07.13						
24	15.08.13						

 

 

LIST OF EFFECTIVE CHAPTERS

Chapter Title	Date*	
GENERAL		
Table of Contents	15.08.13	
Introduction	05.11.12	
04 Airworthiness Limitations	28.10.05	
05 Time Limits / Maintenance Checks	15.08.13	
06 Dimensions and Areas	26.04.05	
07 Lifting & Shoring	02.03.10	
08 Leveling and Weighing	27.09.01	
09 Towing and Taxiing	02.03.10	
10 Parking, Mooring, Storage & Return to Service	02.03.10	
11 Placards and Markings	05.11.12	
12 Servicing	05.11.12	
 AIRFRAME SYSTEMS		
20 Standard Practices Airframe	05.11.12	
21 Ventilation and Heating	08.07.02	
23 Communications	30.04.08	
24 Electrical Power	05.11.12	
25 Equipment and Furnishings	05.11.12	
27 Flight Controls	24.02.11	
28 Fuel	05.11.12	
31 Indicating/Recording Systems	05.11.12	
32 Landing Gear	15.03.02	
33 Lights	05.11.12	
34 Navigation	05.11.12	
 STRUCTURES		
51 Structures	05.11.12	
52 Doors	05.11.12	
53 Fuselage	14.05.02	
55 Stabilizers	14.05.02	
56 Windows	19.07.13	
57 Wings	18.01.06	
 PROPELLER		
61 Propeller	19.03.13	

LIST OF EFFECTIVE CHAPTERS

Chapter Title	Date*
POWER PLANT	
71 Power Plant	26.04.05
74 Ignition	29.10.01
75 Cooling System	26.04.05
76 Engine Controls	26.04.05
77 Engine Indicating	26.11.01
78 Exhaust	07.11.01
79 Oil	07.11.01
80 Starting	05.11.01
91 Charts and Wiring Diagrams	30.04.08

* The date refers to the issue / revision date of the respective chapter.

The technical content of this document is approved under the authority of DOA ref. EASA.21J.025.

15.08.2013


AQUILA Aviation Group
Head of
Airworthiness
DOA/EASA.21J.025

Date, Signature Office of Airworthiness



CHAPTER 5
TIME LIMITS / MAINTENANCE CHECKS


 


TABLE OF CONTENTS

<u>Title</u>	<u>Chapter Section Subject</u>	<u>Page</u>
TIME LIMITS / MAINTENANCE CHECKS - GENERAL	05-00-00	1
Introduction	05-00-00	1
General Description	05-00-00	1
COMPONENT TIME LIMITS	05-10-00	1
General	05-10-00	1
Component Time Limits	05-10-00	1
SCHEDULED MAINTENANCE CHECKS.....	05-20-00	1
General	05-20-00	1
Inspection Time Intervals Chart	05-20-00	1
DAILY INSPECTIONS	05-30-00	1
General	05-30-00	1
Pre-Flight Check	05-30-00	1
Post-Flight Check	05-30-00	1
UNSCHEDULED MAINTENANCE CHECKS	05-50-00	1
General	05-50-00	1
Special Checks	05-50-00	1

 

TIME LIMITS / MAINTENANCE CHECKS - GENERAL

 
1. Introduction

- A. This chapter provides scheduled and unscheduled maintenance checks and inspections, recommended by the type certificate holder AQUILA Aviation GmbH as well as the time limits for service life limited components and parts.

2. General Description

In the following, a brief description and intended purpose of each section of this chapter is given.

- A. Section 05-00-00 - Time limits / Maintenance Checks - General. This section provides a general overview of the content and purpose of this chapter.
- B. Section 05-10-00 – Component Time Limits. This section contains the time limits of all service life limited components and parts and recommended time between overhaul (TBO) for components.
- C. Section 05-20-00 - Scheduled Maintenance Checks. This section contains information about recommended scheduled maintenance and inspections. The recommended maintenance and inspection program for the systems and components as well as the relevant intervals are embodied in a checklist included in this section.
- D. Section 05-30-00 - Daily Inspections. In this section pre-flight and post-flight checks are described, that have to be carried out every day the aircraft is in operation.
- E. Section 05-50-00 - Unscheduled Maintenance Checks. This section specifies checks, which have to be conducted after unusual events and incidences such as hard landings.



COMPONENT TIME LIMITS

1. General

- A. Different components and parts of the aircraft are certified for specific service life. When reaching this time limit, the respective item must be replaced or overhauled.
 In order to monitor permissible service life the installation or removal of each item must be recorded in the aircraft logbook.
 Where an interval is given in both flight time and calendar time, the limit which is reached first must be applied.

2. Component Time Limits

- A. Under certain circumstances the replacement or overhaul of components may be required before the time limits listed below are reached.
- B. Replacement time limits, recommended by the type certificate holder AQUILA Aviation GmbH:

Chapter	Component / Part	Replacement Time	Overhaul
25	Restraint assy pilot / co-pilot	no	12 years
32	Rubber elements of the elastomer spring package at the nose gear	5 years	no
32	Flexible hoses of the aircraft brake system	10 years Note 5	no
71	Engine shock mounts	with engine overhaul	no
71	Flexible fuel hoses ¹⁾	5 years	no
71	Flexible oil hoses	10 years Note 5	no
71	Flexible hoses of the cooling system	5 years	no


¹⁾ Hoses that are not covered by the engine type certificate (TC).

C. Vendor Established Component Time Limits

Chapter	Component / Part	Replacement Time	Overhaul
25	ELT battery	Note 1	no
25	Fire extinguisher Air Total	10 years	Note 4
25	Fire extinguisher H3R	12 years	no
31	ASPEN internal battery	800 h or 3 years	no
34	KMD 150 MFD/GPS internal battery	10 years (recommended)	no
34	WINTER instruments	no	Note 6
61	Propeller MTV-21-A/175-05	no	2000 h or 6 years Note 2
61	Propeller governor Woodward A210786	no	6 years, with engine Note 7
61	Propeller governor P-410-13	no	2000 h or 6 years Note 2.
61	Propeller governor P-850-12	no	2000 h or 6 years Note 2
71	Engine ROTAX 912S	no	2000 h or 15 years, 1500h or 12 years, 1200h or 10 years Note 3
71	ROTAX mechanical fuel pump	5 years Note 3	no
71	ROTAX flexible fuel lines	5 years Note 3	no
71	ROTAX rubber parts of the engine (V-belt, hoses, carburetor parts)	5 years Note 3	no
71	Spark plugs	200 h Note 3	no

NOTES:

 - Note 1: Refer to manufacturer instructions for battery replacement time limits.
- Note 2: Refer to latest issue of the mt-propeller Service Bulletin No. 1.-(), and to the mt-Propeller E-124 Operation and Installation Manual.
- Note 3: Refer to the latest issues of BRP-Rotax, i.e. Service Bulletins, Service Information and to the ROTAX Aircraft Engines Maintenance Manual for ROTAX Engine Type 912 Series.
- Note 4: Refer to manufacturer instruction for overhauling.
- Note 5: Component has to be checked at every annual inspection. If in good condition service life is extended another 12 months. The maximum service life must not be exceeded.
- Note 6: Though there is no TBO for these instruments, the manufacturer Gebr. Winter GmbH & Co. KG recommends that airspeed indicators and altimeters are subjected to retesting after 5 years.
- Note 7: The 6 year calendar time limit applies for units not in continuous service with a minimum of 120 hours per year. Refer to the latest issue of the Woodward Service Bulletin S/B-33580-M.



SCHEDULED MAINTENANCE CHECKS

1. General

- A. The inspection time intervals chart contained in this chapter shows the recommended intervals at which maintenance and maintenance checks should be carried out on the aircraft.

Annual inspections and 100 hour inspections on the AQUILA AT01-100 must include all inspection items as required by FAR 43, Appendix D, "Scope and detail of annual/100h inspections". Chapter 4 "Airworthiness Limitations" of this manual defines the inspection intervals for continued airworthiness.

The following inspection time intervals chart is aircraft-specific and to be used to document the inspections carried out on a specific aircraft. It should not to be used as the primary inspection checklist.

- B. If an aircraft is being operated under unusual environmental conditions, maintenance intervals may be reduced.

2. Inspection Time Intervals Chart

- A. The maintenance and checks listed are to be carried out at the specified intervals and documented appropriately.

NOTE: For new aircraft the first check is carried out after 25 hours and should be of the extent of a 100-hour inspection.

NOTE: Where an interval is given in both flight time and calendar time, the limit which is reached first must be applied.

- B. Due to recent ROTAX publications the maintenance checks given for the ROTAX engine may not be up to date. Refer to the latest revisions of ROTAX Engine Type 912 Series Maintenance Manual and Service Bulletins.
- C. Due to the multiplicity of equipment coming onto the market, no maintenance instructions are given for electronic equipment. For information on a certain component use the documentation provided by the manufacturer of this component.

NOTES: R* Maintenance Manual for ROTAX Engine Type 912 Series (refer to List of Technical Publications in the Introduction section of this manual).
MT* mt-propeller E-124 Operation and Installation Manual (refer to List of Technical Publications in the Introduction section of this manual).
TSN Time Since New

D. Inspection Time Intervals Chart:

Aircraft S/N		Operating Hours		Registration Number	
Engine S/N		Operating Hours TTSN / TTSO:		Date	
Propeller S/N		Operating Hours TTSN / TTSO:		Type of Inspection	

No.	Pre-Inspection / Engine Ground Test	Reference	Interval		Initials
			100h	other	
1.	Check that the following documents are up-to-date and available upon request. - AT01 Maintenance Manual; - AT01 Airplane Flight Manual; - Aircraft Log Book and Required Certificates; - Engine and Propeller Log Books - Equipment List and Weight and Balance Record; - Airworthiness Directives; - Service Bulletins and Service Information; - Services Time Record.	AT01 Maintenance Manual, AT01 Airplane Flight Manual	X		
2.	Airworthiness directives - Verify all airworthiness directives have been complied with.		X		
3.	Service letters, service bulletins, and service information - Verify all AQUILA GmbH and suppliers service letters, service bulletins and service information have been complied with.		X		
4.	Service time records, equipment list and weight and balance records - Check. Update if necessary.		X		
5.	Aircraft file and technical documentation - Verify complete and in proper order.		X		
6.	Engine and engine compartment - Clean for leakage check.	R* 12-00-00 Sec. 2.1	X		
7.	Perform an engine test run as follows: Start engine and warm-up at 820 RPM for approx. 2 minutes, continue at 1030 RPM, duration depends on ambient temperature until oil temperature reaches 50° C. Rudder pedal brakes and parking brake - Check for proper operation. Propeller governor - Set 1700 RPM and monitor the manifold pressure. Reduce engine speed by moving the propeller control by 200 RPM. Note the RPM drop and manifold pressure. Increase RPM to 1700 RPM. Repeat three times.	R* 12-00-00 Sec. 2.8 32-40-00 MT* E-124	X	1 year	

No.	Pre-Inspection / Engine Ground Test (Cont.)	Reference	Interval		Initials
			100h	other	
	<p>RPM drop: _____ RPM / Man. Press : _____ in. Hg</p> <p>Engine instruments - Check engine parameters.</p> <p>Magneto RPM drop - Set 1700 RPM. Check that RPM drop is less than 120 RPM while operating on one magneto and no more than a 50 RPM drop difference between left and right magnetos.</p> <p>RPM drop left magneto : _____ RPM RPM drop right magneto: _____ RPM</p> <p>Carburetor heat - Pull carburetor heat knob at 1700 RPM. Engine RPM should show a drop of at least 20 RPM.</p> <p>RPM drop: _____ RPM</p> <p>Engine full power - Advance throttle to full forward. Tachometer should read 2265 ± 50 RPM.</p> <p>Full power RPM: _____ RPM</p> <p>Engine idle - Move throttle control lever to full aft. Tachometer should read 750 +50 RPM.</p> <p>Idle RPM: _____ RPM</p> <p>Cool down engine at 1100 RPM. Shut down engine, set the ignition switch and the master switch to the OFF position. Remove ignition key from aircraft.</p>	R* 12-00-00 Sec. 2.8			
8.	Airframe, power plant, propeller - Do a walk around to detect damages, fluid leaks or other abnormalities.		X		
9.	Fuselage and empennage - Clean.		X		
10.	Aircraft interior - Clean and vacuum.		X		
11.	Record all malfunctions and abnormalities.		X		

No.	Engine	Reference	Interval		Initials
			100h	other	
1.	Engine cowling - Remove engine cowling. Check for cracks, overheated areas, deformation, loose or missing fasteners. Check condition of fire protect paint and heat resistance shielding.		X	1 year	
2.	Engine oil - Drain and change. Remove old oil filter from engine and install new oil filter.	12-12-00 R* 12-20-00 Sec. 11.3, 11.4	X	50h ¹⁾ 1 year	

¹⁾ If more than 30% of operation hours have been flown with leaded fuel e.g.: AVGAS 100LL (SI-912-016)

No.	Engine (Cont.)	Reference	Interval		Initials
			100h	other	
	<p>CAUTION: DO NOT USE AIRCRAFT ENGINE OIL.</p> <p>Due to the friction clutch and the high stresses in the reduction gear 4-stroke motor cycle oils are recommended. For suitable lubricants and oil change intervals, see ROTAX Operators Manual and latest appropriate ROTAX publications.</p> <p>Remove oil drain screw from oil tank. Drain old oil and dispose of in accordance with environmental regulations. Remove oil filter from engine and install a new oil filter. Lubricate mating sealing ring of new oil filter with engine oil. Tighten new oil filter by hand. Renew gasket ring of drain screw on oil tank. Tighten drain screw to 25 Nm (220 in. lb). Check oil tank - Refill oil tank with approx. 3 liters of oil. For oil quality, see Operators Manual and SI-912-016 latest edition.</p> <p>Refilled: _____ Quantity: _____ L</p>	<p>SI-912-016 latest revision</p> <p>SB-912-033 latest revision</p> <p>SI-27-1997, latest revision SI-912-010, latest revision SB-912-040, latest revision</p> <p>R* 12-20-00 Sec. 11.2, 11.6</p>			
3.	<p>Oil change - Cut open old oil filter and check for particles.</p> <p>Findings _____</p>	R* 12-20-00 Sec. 11.5	X	50h ¹⁾ 1 year	
4.	<p>Visual inspection of the magnetic plug for accumulation of chips</p>	R* 12-20-00 Sec. 12	X	1 year	
5.	<p>Check compression by differential pressure method. Test pressure: 6 bar (appr. 6000 hpa / 87 psi) Pressure drop: max. 25% cyl. 1 2 3 4</p> <p>Pressure drop: ____ ____ ____ ____</p>	R* 12-20-00 Sec. 5	X	1 year	
6.	<p>Cooling air ducts, engine baffling and cylinder cooling fins - Check for obstructions, cracks, wear and general condition. Check for signs of abnormal temperatures. Check crankcase for cracks.</p>	R* 12-20-00 Sec. 3	X	1 year	recommended 50h
7.	<p>Leakage bore at the base of the water pump - Check for signs of leakage.</p>	R* 12-20-00 Sec. 4	X	1 year	
8.	<p>Cooling system - Flush the cooling system where conventional coolants are used.</p>	R* 12-00-00 Sec. 9.3 12-14-00			when replacing the coolant
9.	<p>Coolant hoses and lines - Check for damage, leakage, hardening due to heat, porosity, loose connections and secure attachments. Check routing for kinks and narrow bends.</p>	R* 12-20-00 Sec. 9.1 75-10-00	X	1 year	

¹⁾ If more than 30% of operation hours have been flown with leaded fuel e.g.: AVGAS 100LL (SI-912-016)

No.	Engine (Cont.)	Reference	Interval		Initials
			100h	other	
10.	Coolant expansion tank - Check for damage and abnormalities. Inspect rubber protection plate on tank base for secure fit. Check coolant level, replenish as necessary. Check coolant with densimeter. Check gasket of radiator cover, inspect pressure control valve, and return valve. The pressure control valve opens at 1,2 bar (18 psi).	R* 12-20-00 Sec. 9.1 75-10-00 SB-912-043, latest revision	X	1 year	
11.	Overflow bottle - Inspect for damage and abnormalities. Verify coolant level, replenish as necessary. Inspect venting bore in cap of overflow bottle for clear passage. Line from exp. tank to overflow bottle - Check for damage, leakage and clear passage.	R* 12-20-00 Sec. 9.5 75-10-00	X	1 year	
12.	Oil and coolant radiator - Check for obstructions, leaks and security of attachment. If necessary, clean cooling fins and do a pressure leakage test.	79-20-00	X	1 year	
13.	Oil lines - Inspect for damage, leakage, hardening due to heat, porosity, security of connections and attachments. Check routing for kinks or narrow bends. Check fire protection shielding.	R* 12-20-00 Sec. 4	X	1 year	
14.	Oil tank vent line - Check for proper routing, for obstructions and clear passage		X	1 year	
15.	Fuel lines - Check for damage, leakage, hardening due to heat, porosity, secure connections and attachments. Check routing for kinks or narrow bends. If applicable check also steel fuel lines for cracks and scuffing marks.	R* 12-20-00 Sec. 4	X	1 year	
16.	Fuel selector / shut-off valve - Check for security of attachment. Check that the valve engages noticeable into the positions LEFT, RIGHT and OFF.		X	1 year	
17.	Filter element of electrical fuel pump - inspect and clean.	28-20-00 Para. 4, 5	X	1 year	
18.	Battery - Clean. Check correct acid level, charge and capacity. Check battery vent case for obstructions and proper routing. If necessary, replenish and charge battery.	12-17-00	X	1 year	
19.	Battery tray, terminals and cables - Check for security, corrosion and general condition.		X	1 year	
20.	Starter - Check security of attachment and electrical connections.	R* 12-00-00 Sec. 6.1	X	1 year	
21.	Alternator - Check attachment and V-belt tension. Inspect electrical connections.	R* 12-20-00 Sec. 6	X	1 year	
22.	Spark plugs - Remove all spark plugs, check the heat range designation, clean, check electrode gap and adjust if necessary. Replace as required.	R* 12-20-00 Sec. 14.2	X	1 year	

No.	Engine (Cont.)	Reference	Interval		Initials
			100h	other	
23.	Spark plug connectors - Check that resistance spark plug connectors fit tightly on the spark plugs. Minimum pull-off force is 30 N (7 lb).			200h	
24.	Replace spark plugs	R* 12-20-00 Sec. 14.2	X ¹⁾	200h 1 year	
25.	Oil temperature / oil pressure sensor - Check for tight fit and condition.		X	1 year	
26.	Exhaust system - Check attachment screws and springs for security and fit. Inspect system for damage and missing parts. Visual inspection of the muffler, exhaust pipes and mounting flanges for cracks, corrosion and leakage. Check heat shielding for condition.		X	1 year	
27.	Cabin heat - Check heat shroud and heat ducts for damage and security of attachment. Check heat control function.		X	1 year	
28.	Exhaust muffler - Remove heat shroud from muffler and inspect muffler for condition, corrosion and leakage. WARNING: FAILURE TO INSPECT MUFFLER FOR LEAKS COULD RESULT IN CARBON MONOXIDE ENTERING THE CABIN, LEADING TO SERIOUS INJURY OR DEATH!	78-10-00		200h	
29.	Propeller gear box - Check the friction torque in free rotation on gearboxes with overload clutch. Actual friction torque is measured: _____ Nm	R* 12-20-00 Sec. 15	X	1 year	
30.	Propeller gear box - Series 3 (with overload clutch) and more than 30% of operation hours flown with leaded fuel - inspect overload clutch	R* 05-50-00 Sec. 2 SB-912-033		600h	
31.	Propeller gear box - Check the propeller gearbox (with overload clutch).	R* 12-20-00 Sec. 15.2 SB-912-041		1000h	
32.	Carburetors - Check carburetor synchronization. Mechanical or pneumatic synchronization. Inspect the float chamber assy for contamination and corrosion.	R* 12-20-00 Sec. 10.2 Sec. 10.5	X	1 year	
33.	Carburetors - Check the ventilation of the float chambers. Any trouble with float chamber ventilation impairs engine and carburetor function and must therefore be avoided. Check that the passage of the ventilation lines is free and that no kinks can arise.			200h	
34.	Carburetors - Removal/assembly of the two carburetors for carburetor inspection.	Rotax Heavy MM, 73-00-00 Sec. 3.1		200h	

¹⁾ if more than 30% of operation hours have been flown with leaded fuel e.g.: AVGAS 100LL (SI-912-016)

No.	Engine (Cont.)	Reference	Interval		Initials
			100h	other	
35.	Carburetors - Check the free movement of the carburetor actuation (throttle lever and starting carburetor). Check that the Bowden cable allows full travel of the throttle lever from stop to stop.	R* 12-20-00 Sec. 10.5	X	1 year	
36.	Carburetor sockets and drip tray - Inspect the carburetor for damage and abnormalities, check for cracks, wear and good condition. Take note of any changes caused by temperature.	Rotax Heavy MM, 73-00-00		200h ¹⁾	
37.	Airbox assy - Check for damage, security of attachment and condition. Inspect connected air hoses for condition and leakage. Check that the flaps can be moved through their full arc of travel for hot and filtered ram air.		X	1 year	
38.	Air filter - Inspect and clean. Renew if necessary. Clean air filter casing. Check the drain hole at the bottom of casing for obstructions or blockage.	R* 12-20-00 sec. 2	X	1 year	
39.	Other external engine accessories - Inspect screws and nuts of all other external engine parts and accessories for tight fit. Inspect safety wiring if applicable, replace as necessary.		X	1 year	
40.	Engine mounts (manufactured by ROTAX and AQUILA) - Check mounts for deformation, cracks, corrosion, security and damage from heat. Check mounting bolts for condition and correct torque value. At engine (4 bolts M10): 35 Nm At shock mounts (4 bolts M10): 25 Nm At firewall (4 bolts M10): 30 Nm Inspect shock mounts for deterioration.	R* 12-20-00 Sec. 3.1 SB-912-028, latest revision SB-AT01-022, latest revision	X	1 year	
41.	Engine test run - Attach cowling and perform an engine test run as described above in "Pre-Inspection/Engine Ground Test". After engine test run, re-tighten oil filter by hand and examine engine and engine compartment for signs of leakage. Compare results with first engine test run. Check oil level, replenish as necessary.	17-10-00 05-20-00 R* 12-10-00 Sec. 4.1	X	1 year	

No.	Propeller	Reference	Interval		Initials
			100h	other	
1.	Spinner - Remove from aircraft and check for delamination and cracks.	61-10-00	X		
2.	Spinner plate - Check for cracks and fit.		X		
3.	Blade root and hub area - Examine for oil and grease leaks.		X		
4.	Propeller blades - Check blade play (up to 3 mm [1/8 in.] allowed).		X		

¹⁾ See SB-912-030 - latest edition.

No.	Propeller (Cont.)	Reference	Interval		Initials
			100h	other	
5.	Propeller blades - Check blade angle play. (max. 2°)		X		
6.	Hub - Inspect outside condition of the hub and parts for cracks, corrosion and deterioration.		X		
7.	Check nuts for low pitch - Inspect for tightness and safety wire.		X		
8.	Propeller assy - Check safetying.		X		
9.	Propeller flange stop nuts - Check correct torque value (45 - 47 Nm).		X		
10.	Propeller blades - Visual inspection for damage, repair if necessary. Attach spinner.	MT* E-124 Para. 6.2.1 thru 6.10	X		

No.	Fuselage / Cabin	Reference	Interval		Initials
			100h	other	
1.	Prepare aircraft for visual checks: Remove cabin carpets and floorboards; Remove glare shield; Remove baggage compartment floorboard; Remove access panel of the baggage compartment bulkhead; Remove access panel 210AB.	06-30-00	X		
2.	Fuselage shell - Visual inspection for paint coat damage, dents, cracks, holes, distortion and other evidence of failure. All unpainted parts for delamination (white spots).		X		
3.	Lower fin - Inspect fin and lower rudder for signs of breakage. Check skid plate for wear.		X		
4.	Canopy - Examine the acrylic glass for cracking, crazing and general condition. Inspect tubular canopy hinge frame and brackets for cracks, distortion, corrosion, wear, and security of attachment. Check the gas spring strut for sufficient power and evidence of leakage.		X		
5.	Canopy locking - Check the canopy locking mechanism operates correctly. Check wear of parts. Check existence of the locking pin. The pin has to protrude the cover by approx. 2 mm. All cases of lacking locking pins have to be reported to the type certificate holder (contact information: see cover sheet). Check function of the locking pin. The canopy locking mechanism must not be too smooth-running. In the locked position of the latch, a smooth running release of the latch due to in-flight vibrations must not be possible. If necessary, readjust locking pin.	52-10-00	X		

No.	Fuselage / Cabin (Cont.)	Reference	Interval		Initials
			100h	other	
6.	Baggage door - Check door seal, door latching mechanism, and door hinge for defects and condition. Inspect door structure for cracks or other damage.		X		
7.	ELT - Perform ELT inspection. Check ELT mount and Velcro strap for security of attachment. Replace strap if necessary.	25-62-00		annual	
8.	Seat belts/harnesses for pilot / co-pilot - Check for proper operation, condition, and security of attachment.		X		
9.	Seats - Check security of attachment of the seat assy to aircraft structure. Check operation of seat adjustment mechanism and seat stops. Inspect gas spring struts for oil leakage or other damage.		X		
10.	Seats - Check ease of movement - if required remove seats, clean and lubricate seat rails.	25-10-00		annual	
11.	Center Console - Visually examine the parts of the engine controls, lines, and cables, located in the center console.			annual	
12.	Main landing gear - Inspect fuselage structure at such points and areas where the main landing gear is attached. Check for stress marks, distortion, disbonding, and delamination. Inspect main landing gear strut brackets for distortion, cracks, corrosion, and security of attachment. Check wear and condition of the polyamide inserts. Check bolts for correct torque.		X		
13.	Parking brake valve - Check for evidence of leakage especially at the brake line connections. Check control assy for damage.		X		
14.	Flap actuator - Check for wear and damage, for secure mechanical connections and loose or missing lock devices. Check electrical wiring for wear, damage, and proper routing. Inspect electrical connections and switches for security, corrosion and poor condition. Check function of the limit switches and position indicator.		X		
15.	Elevator trim system - Check the actuator and the springs for security, wear and damage. Check safetying. Check electrical wiring for wear, insulation damage, and proper routing. Inspect electrical connections and switches for security, corrosion and poor condition. Perform system test and check the correct function of the position indicator.		X		
16.	Aileron and elevator control - Check the control sticks, the brackets and the control rods for distortion, cracks, chafing, corrosion and security. Examine all bearings for condition and secure fit. Check safetying. Check travel of control surfaces if the control stick is in the full forward /neutral/ aft, and full left /neutral/ right positions. Verify no binding or jumpy movement of the control sticks through their full range of travel.		X		

No.	Fuselage / Cabin (Cont.)	Reference	Interval		Initials
			100h	other	
17.	Rudder control - Check rudder control weldment and rudder bellcrank for cracks, distortion, chafing and security. Examine rudder control support brackets, rudder pedal pivot brackets and connection of the rudder controls with the nose gear steering tubes for security, condition and correct splintering. Check centering of springs and cables. Inspect control cables, control cable guides, cable connections, turnbuckles and hardware for correct installation, corrosion, wear, safetying and proper operation.		X		
18.	Rudder / aileron control interconnection - Check condition and correct function.		X		
19.	Brake lines and brake master cylinder in the forward cabin area - Check for security and signs of leakage.		X		
20.	Brake reservoir - Check for leakage and system for trapped air. Inspect the vent valve in the filler cap of the brake reservoir for obstruction and blockage. Make sure the hydraulic brake fluid level is correct and replenish, if necessary. Only use hydraulic brake fluid of the required grade.		X		
21.	Hydraulic brake fluid - Renew.			2 years	
22.	Fuel lines - Check for leakage and security.		X		
23.	Wing main bolts - Inspect for proper fit, condition and correct safetying.	57-10-00	X		
24.	Wing main bolts - Remove for visual inspection and lubrication.	57-10-00		500h or 5 years	
25.	Engine and propeller controls - Check for proper function, security of attachment and for evidence of wear.		X		
26.	Exterior / interior placards and markings - Check presence, legibility, and security. Consult Airplane Flight Manual for required placards.	11-20-00 11-30-00	X		

No.	Wings, Ailerons, Flaps	Reference	Interval		Initials
			100h	other	
1.	Wings with winglets, ailerons, and flaps - Visual inspection for paint coat damage, dents, cracks, holes, distortion and other evidence of failure. Examine all unpainted parts for delamination (white spots).		X		
2.	Wing spars in the fuselage belly - Remove spar covering and perform visual inspection of the spar web, the bonding between the spar web and the carbon fiber spar cap strip, as well as the attachment of the root ribs to the spars. Check security and function of control system brackets attached to the spars.			annual	

No.	Wings, Ailerons, Flaps (Cont.)	Reference	Interval		Initials
			100h	other	
3.	Drain and vent holes - Check for blockage and suspect appearance of any liquid.		X		
4.	Ailerons - Check aileron hinges, bearings, and hinge brackets for security and excessive play. Check bolts and nuts for proper safetying. Examine aileron pushrod for correct installation with stop nuts. Check aileron actuation assembly for suspect binding, and excessive play.		X		
5.	Aileron hinges - Check play allowed: - Axial $\pm 1,00$ mm (± 0.04 in.) - Radial $\pm 0,30$ mm (± 0.01 in.)		X		
6.	Aileron control system - Measure the play in the aileron control system with the control surface locked. Apply a lateral force of 30 N (6.7 lb) to the control stick - the maximum play allowed on the top of the stick is 10 mm (0.4 in.) for both sides. The play should be measured for both control sticks. If excessive play is detected, investigate cause.		X		
7.	Flaps - Check hinge brackets for damaged paint, cracks and delamination. Check bearings for correct fit and excessive play. Check the correct safetying of all hinge bolts and castle nuts with cotter pins.		X		
8.	Flaps - Check flap hinges for play allowed: - Axial $\pm 0,30$ mm (± 0.01 in.) - Radial $\pm 0,30$ mm (± 0.01 in.) Measure the play in the flap control system at the flap trailing edge, at the inboard flap end. Max. play allowed with flaps in take-off and landing positions: ± 5 mm (0.2 in.). No play with flaps retracted.		X		
9.	Flaps and ailerons - Check that the gap between fuselage and flaps, between flaps and ailerons, and at the outboard end of the ailerons is at least 2 mm (0.08 in.).		X		
10.	Stall warning system - Check for condition and proper operation.		X		
11.	For serial numbers from AT01-100 to AT01-126: Bonding between wing spar and upper shell - Check condition.	57-10-00 SB-AT01-002, latest revision		annual	
12.	Navigation / strobe lights - Check operation, condition of glass, and security of attachments.	33-40-00	X		
13.	Inner fuel tank ribs - Check connection of fuel and vent lines to the fuel tank and the flange gasket of the fuel level sensors for signs of leakage.	28-10-00 28-20-00 28-40-00		annual	
14.	Fuel vent lines - Check for blockage.		X		
15.	Fuel tank drain valves - Check for correct function and leakage.		X		

No.	Wings, Ailerons, Flaps (Cont.)	Reference	Interval		Initials
			100h	other	
16.	Fuel filler caps - Check for proper function and leakage.		X		
17.	Tank inlet and upper wing shell in the fuel tank area - Check sealing of the bore hole in the tank inlet. Check wing skin for bubble formation or bulging.	SB-AT01-027, latest revision		annual	
18.	Tie-down points - Check thread and structure around the tie-down attach points for any damage.	10-20-00	X		

No.	Empennage, Elevator, Rudder	Reference	Interval		Initials
			100h	other	

1.	Empennage - Inspect complete surface of the vertical and horizontal stabilizers, the elevator and the rudder for dents, cracks, holes and delamination.		X		
2.	Rudder hinge, elevator hinge and bellcranks - Check brackets and bellcranks for security of attachment and corrosion. Examine bearings for binding and excessive play. Check correct safetying of the lower rudder pivot pin with castellated nut and cotter pin.		X		
3.	Hinge play and control surface positioning - Verify clearance between horizontal stabilizer and elevator horns and clearance between vertical stabilizer and rudder horn is at least 1 mm (0.04 in.). Check elevator hinge and rudder hinge play max. allowed: - Axial $\pm 0,30$ mm (± 0.01 in.) - Radial $\pm 0,30$ mm (± 0.01 in.)			annual	
4.	Elevator control system - Measure the play in the elevator control system with the control surface locked. Apply a force of 50 N (11.2 lb) forwards and then backwards to the control stick - the maximum play allowed on the top of the stick is 10 mm (0.4 in.) for both sides.			annual	
5.	Rudder - Remove rudder if there is noticeable play. Examine the elevator actuation assembly inside the vertical stabilizer. Check for any damage, for correct installation and function and for security and wear. Inspect rudder hinge brackets, rudder yoke and control cable thimble-eyes for security, conditions and wear. Lubricate control cable thimble-eyes as required.	55-40-00		annual	
6.	Rudder rigging - Set rudder pedals in neutral position. Verify the rudder and the nose landing gear are also in neutral position. Set rudder pedals to fully left and then to full right. The rudder must hit the rudder travel stops and the distance from rudder pedal to firewall must be sufficient to apply the pedal brake. Adjust position of the rudder pedals by varying the length of nose wheel steering tubes. Adjust rudder neutral position and control cable tension by means of the turnbuckles in the cabin area.	27-20-00	X		

No.	Nose and Main Landing Gear	Reference	Interval		Initials
			100h	other	
1.	Wheel fairings - Check condition and correct fit. Remove and clean. Check for paint coat damage, cracks, dents and delamination.		X		
2.	Fairing mounts - Inspect for cracks, distortion or other damage.		X		
3.	Nose gear strut mount and wheel fork - Check for deformation, cracks and corrosion. Check nose gear strut journal bearing for proper operation, play and correct safetying.		X		
4.	Nose gear strut and elastomer package - Check strut for deformation, stress marks, and cracks. Inspect correct installation of the nose wheel fork. Inspect elastomer package for wear, deterioration, cracks, correct fit and security. Check journal bearings of the elastomer package for play and condition.		X		
5.	Nose wheel steering - Inspect nose wheel steering tubes for condition, excessive play and correct safetying. Check return springs at nose gear strut for security and verify they are tension-free, when the nose wheel is in neutral position.		X		
6.	Main landing gear - Check main gear struts for deformation, cracks, damage to the paint coat, and corrosion. Inspect wheel axles for security of attachment to struts and for any damage.		X		
7.	Wheels and rims - Clean. Check tires for wear, cuts, foreign matter and deterioration. Inspect rims for security, deformation, cracks and other damage. Examine wheel bearings for excessive play, corrosion and irregular operation. Check tire pressure and proper location of the red slide marks.		X		
8.	Wheel bearings - Clean and lubricate.	12-22-00		annual	
9.	Wheel brakes - Clean. Apply brakes, examine system for leaks. Inspect brake fluid carrying lines at the main landing gear for condition, leakage and security of attachment. Inspect brake discs for cracks, corrosion and wear. Replace brake discs if worn below 4.3mm (0.17 in.). Inspect brake pads for condition and wear. Replace linings when worn to 2.6mm (0.10 in.). Check freedom of movement of pistons and pressure plates.	32-40-00	X		


No.	Electrical System / Avionics	Reference	Interval		Initials
			100h	other	
1.	Electrical wiring system - Check the complete electrical wiring system for security, damage, wear and secure fit. Check all cable connections for tight fit, good contact, corrosion and condition.	R* 12-20-00 Sec. 14.1	X		
2.	Instruments - Check instrument panel mounting brackets for security and condition. Examine instruments for security of attachment. Check electrical cables, hoses and lines for correct installation, condition and proper routing. Inspect air filter of the pitot / static system for obstructions and contamination.			annual	
3.	Pitot / static system - Check pitot tube for security of attachment, condition and obstructions. Check pitot and static pressure lines for correct installation, condition, water and proper routing.		X		
4.	Garmin G500 system - Check all components and wiring for damage, corrosion, proper operation and security of attachment.	34-21-00		annual ¹⁾	
5.	Garmin G500 system - Check bonding.	34-21-00		2000h ¹⁾ 10 years	
6.	Aspen EFD1000 system - Check all components and wiring for damage, corrosion, proper operation and security of attachment. Perform bonding check..	34-21-00		annual ¹⁾	
7.	Tank inlet bonding wires - Check bonding wires at the airframe ground tube for yellow discolouration.	SB-AT01-027, latest revision		annual	

No.	Return to Service	Reference	Interval		Initials
			100h	other	
1.	Install wheel fairings. Install seats (if removed). Install cabin floor boards. Install baggage compartment floorboard. Install access panel of the baggage compartment bulkhead. Install access panel 210AB.	06-30-00	X		
2.	Flight controls - Check for full range of travel and excessive friction.		X		
3.	Flaps - Operate through full extension and retraction for steady and complete deployment. Check correct limit switches operation at CRUISE, T/O and LDG flap positions. Verify the corresponding flap switch position and the corresponding flap position indicator reading.		X		

1) If installed.

No.	Return to Service (Cont.)	Reference	Interval		Initials
			100h	other	
4.	Elevator trim - Check for full range of travel and excessive friction. Inspect proper operation of the trim control switch, limit switches, and the trim position indicator. Verify that elevator control forces decrease or increase when operating elevator trim.		X		
5.	Engine and propeller controls - Check full range of motion without any obstruction or excessive friction to travel. Check throttle and propeller control levers friction lock.		X		
6.	Foreign items - Remove any foreign items from the aircraft.		X		

<p>The aircraft is airworthy and meets the condition specified in the aircraft data sheet. All maintenance required by Service Information and Airworthiness Directives and all prescribed scheduled maintenance checks have been carried out.</p>		
Service Station:	Next inspection when _____ hours of operation have been reached.	
	Place, Date	
Name, Signature of Mechanic	Name, Signature of Inspector	Stamp

 

DAILY INSPECTIONS

1. General

- A. Pre-flight and post-flight checks must be carried out daily when the aircraft is in operation.

 
2. Pre-Flight Check

- A. This check must be carried out before the first flight of the day. In this way, the general condition of the aircraft and its engine can be ascertained.

The scope of the pre-flight check is listed in the AQUILA AT01 flight manual, section 4. Pre-flight checks are essential for flight safety as numerous accidents can be traced back to inadequate pre-flight checks.

3. Post-Flight Check

- A. This check should be carried out after the final flight of the day. For the most part, it is a visual inspection.
- B. The check should contain all points of the pre-flight check.
 - (1) Supplementary measures:
 - (a) Re-fuel
 - (b) Check that the aircraft is properly parked (refer to 10-10-00).
 - (c) Check the logbook entries for remarks about faults or defects, and for correct number of landings and flight hours.
 - (d) If necessary, moor the aircraft (refer to 10-20-00).



UNSCHEDULED MAINTENANCE CHECKS

1. General

- A. Special checks are to be carried out when an incident has occurred that may have caused damage to the aircraft or impaired airworthiness.

In addition, a 25-hour inspection must be carried out on new aircraft and its engine, on overhauled engines and after extensive airframe repairs.

2. Special Checks

A. 25-Hour Inspection

After the first 25 hours of operation of a new aircraft and its engine or an overhauled engine or after extensive airframe repairs, an inspection of the extent of a 100-hour inspection must be carried out (refer to 05-20-00).

After the first 25 hours of operation of new or overhauled engine, the engine and the propeller must be inspected. Refer to ROTAX Aircraft Engines maintenance manual for ROTAX engines type 912 series for detailed information on this inspection.

B. Hard Landing

After an excessively hard landing or other unusual loading of the landing gear a thorough inspection of the affected components and their attachments is required. Even if no obvious defects are detectable, a visual inspection must be carried out. Perform the following:

- (1) Prepare aircraft for visual checks as follows:
 - (a) Remove engine cowling (refer to 71-10-00).
 - (b) Remove landing gear fairings.
 - (c) Inside the cabin and baggage compartment - remove carpets and floorboards as required to gain access to the landing gear mounting brackets (refer to 25-21-00).
- (2) Inspect main landing gear.
 - (a) Check wheel fairings for cracks, dents and delamination.
 - (b) Check fairing mounts for cracks, distortion and other damage.
 - (c) Check fuselage structure visually at such points and areas where the main landing gear is attached. Check for stress marks, distortion, disbonding, and delamination. Check main landing gear strut brackets for distortion, cracks and security of attachment. Check condition of the polyamide inserts. Check bolts for correct torque.
 - (d) Check main gear struts for deformation and cracks. Examine wheel axles for security of attachment to struts and for any damage.
 - (e) Inspect tires for integrity and proper location of the red slide marks.
 - (f) Inspect brake fluid carrying lines at the main landing gear for condition, leakage, and security of attachment.

- (3) Inspect nose landing gear.
 - (a) Check wheel fairing for cracks, dents and delamination.
 - (b) Inspect fairing mounts for cracks, distortion and other damage.
 - (c) Check nose gear strut mount for deformation and cracks. Check nose gear strut journal bearing for proper operation and play.
 - (d) Check strut for deformation, stress marks, and cracks. Check elastomer package for deterioration, cracks, correct fit and security. Check journal bearings of the elastomer package for play and condition.
 - (e) Inspect nose wheel steering tubes for condition and excessive play.
 - (f) Inspect tire for integrity and proper location of the red slide marks.
- (4) Re-mount all items removed during the inspection.
- (5) Perform a brake and steering system operational test (refer to 32-40-00).

C. Engine Fire

After an engine fire, carry out the following:

WARNING: IF IT IS SUSPECTED THAT PARTS OF THE STRUCTURE OR COWLING COULD HAVE BEEN DAMAGED BY HIGH TEMPERATURES (INDICATED BY BLISTERING ON THE PROTECTIVE COATING), THE MANUFACTURER MUST BE CONTACTED FOR DEFECT APPRAISAL BEFORE THE AIRCRAFT IS FLOWN AGAIN.

- (1) Disconnect battery (refer to 24-30-00).
- (2) Remove engine cowling (refer to 72-10-00).
- (3) Examine engine cowling. Check for signs of fire damage.
- (4) Examine electrical cables for damaged insulation.
- (5) Examine fuel lines for damage of the fire-protection sleeves.
- (6) Check oil lines for damage of the fire-protection sleeves.
- (7) Check air filter element for fire damage.
- (8) Examine engine mount and shock mounts for any fire damage.
- (9) Check all other hoses and pipes, as well as all gaskets and seals for fire damage.
- (10) Replace damaged items.
- (11) Re-mount engine cowling (refer to 72-10-00).
- (12) Perform an engine test run (refer to 05-20-00).

D. Violent Stop of the Engine

In event that the propeller has touched the ground or the engine has been inadvertently stopped violently (shock loading), the propeller gear box must be disassembled and inspected by an authorized workshop. For further information on engine inspections necessary after a propeller ground strike and for more general information, refer to the relevant technical documents and the ROTAX Maintenance Manual.

CAUTION: ONLY QUALIFIED TECHNICIANS (AUTHORIZED BY THE NATIONAL AVIATION AUTHORITY AND AFTER SUCCESSFULLY COMPLETING THE RELEVANT ROTAX TRAINING COURSE) ARE AUTHORIZED TO PERFORM THIS WORK.

Check additional equipment (external alternator, hydraulic governor, ignition unit, coolant and oil hoses) for damage.