

Section 9

Airplane Flight Manual Supplement AVE25

Aspen EFD1000 MFD

This AFM-Supplement is applicable and must be inserted into section 9 of the airplane flight Manual if the Aspen EFD 1000-MFD is installed in the Aquila AT01. The information of this AFM-Supplement adds or replaces information of the basic Airplane Flight Manual.



The technical content of this Airplane Flight Manual Supplement is approved under the Authority of DOA No. EASA.21J.025.

Schönhagen, 14.09.2011



Head of Airworthiness Department

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-1

0.1 LIST OF REVISION AND AMENDMENTS

Issue	Reason for Amendment /Revision	Affected Pages	Date of Issue
A.01	Initial Issue	All	20. Oct 09
A.02	Documentary changes	All	14.Sept 11

0.2 LISTE OF EFFECTIVE PAGES

Page	Issue	Date
AVE25-1	A.02	14.Sept 11
AVE25-2	A.02	14.Sept 11
AVE25-3	A.02	14.Sept 11
AVE25-4	A.02	14.Sept 11
AVE25-5	A.02	14.Sept 11
AVE25-6	A.02	14.Sept 11

Page	Issue	Date
AVE25-7	A.02	14.Sept 11
AVE25-8	A.02	14.Sept 11

0.3 TABLE OF CONTENTS

Section 1	GENERAL	AVE25 - 3
Section 2	OPERATING LIMITATIONS	AVE25 - 4
Section 3	EMERGENCY PROCEDURE	AVE25 - 6
Section 4	NORMAL PROCEDURE	AVE25 - 7
Section 5	PERFORMANCE	AVE25 - 8
Section 6	WEIGHT AND BALANCE	AVE25 - 8
Section 7	SYSTEMS DESCRIPTION	AVE25 - 8
Section 8	HANDLING; SERVICE AND MAINTENANCE	AVE25 - 8

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-2

1. General

1.1. Introduction

The information contained within this AFM-Supplement is to be used in conjunction with the complete Airplane Flight Manual.

This supplement provides the information necessary for the efficient operation of the Aquila AT01 when the ASPEN Multi-Function Display (MFD) EFD 1000 is installed.

This AFM-Supplement is subdivided in the chapter used in the basic airplane flight manual. All the listed chapters are affected by the Minor Change Aquila AT01-00317 „Installation Aspen PFD / MFD“.

To operate the device, a system software v1.1 or higher is required. A software update is an SI (Service Information) released on our website (www.aquila-aviation.de). To your current software version you can read in chapter 6.5.1 Equipment List and always keep up to date.

For a detailed description of the EFD1000-MFD and full operating instruction, refer to the effective issue of the Aspen EFD 1000 (MFD) Pilot's Guide, P/N 091-00006-001.

NOTE

The pilot's Guide for the Aspen EFD 1000 MFD is available only in English language.

1.11. Terminology and Abbreviations

1.11.5 Miscellaneous

PFD	Primary Flight Display
MFD	Multifunctional Display

<i>Document No.:</i>	<i>Issue:</i>	<i>Supersedes Issue:</i>	<i>Date:</i>	<i>Page:</i>
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-3

2. Limitations

2.3 Airspeed Indicator Markings

The Aspen EFD1000-MFD is an optional equipment. A failure of the MFD is noncritical during the flight. The MFD is a additional source of information. The MFD can be changed to a PFD as backup system. A airspeed indicator and altimeter will be displayed in PFD-mode.


The pilot can use these indicators as information source. The analog airspeed indicator and the altimeter are the operative instrument for evaluation for speed and altitude.

The PFD-airspeed indicator markings are equal to the analog airspeed indicator. These markings are conform to the basic airplane flight manual chapter 2.3.

<i>Document No.:</i>	<i>Issue:</i>	<i>Supersedes Issue:</i>	<i>Date:</i>	<i>Page:</i>
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-4

2.16 Placards

5.) On the instrument panel, adjacent to the right side of the circuit breakers:

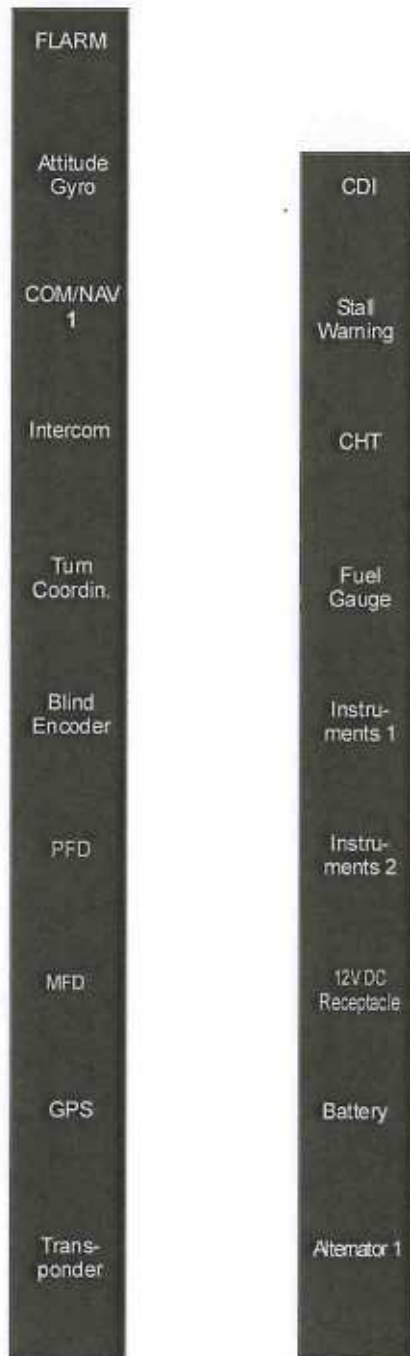

Depending on the equipment installed in the aircraft, not every position shown above might be actually assigned with a circuit breaker. In those cases the respective positions are covered by a blank plastic plug and reserved for that application by the placard.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-5

3. Emergency Procedure

3.1 Introduction

This section provides checklists with the recommended procedures for coping with various emergency situations.

Emergencies caused by aircraft or engine malfunctions are extremely rare if all pre-flight inspections and required maintenance activities are conducted properly.

Nevertheless, if an emergency situation occurs, the herein provided basic procedures are recommended to correct the problem and to master the situation.

However, it is impossible to account for all kinds and combinations of emergency cases that may arise in operation in this manual. Therefore, the pilot must be familiar with the aircraft, its systems, and its flight behaviour. Very important in such cases is a sound judgment and sufficient knowledge of the aircraft and its systems.

3.10 Electrical power supply system malfunctions

3.10.1 Complete Failure of Electrical System

NOTE

The Aspen MFD has a internal backup battery. This internal battery covers a power supply of at least 30 min. If the external power supply has a malfunction the MFD switched automatically to the internal battery. Any push button, except the „REV“ push button, must be used to stop the automatically shut down procedure of the MFD.

Check all messages on the display!!

3.10.2 Alternator Failure

3.10.2.1 External Alternator Failure (Generator 1)

Additional to the procedures descript in the Basic Airplane Flight Manual the MFD must be switched "OFF". (see Pilot's Guide EFD 1000 MFD).

3.10.2.2 Internal Generator Failure (Generator 2)

NOTE

If the Aquila AT01 is equipped for NVFR-operation the electrical system will be supplied by the internal generator too.

The electric power consumption will be covered by the external generator.
No additional actions are necessary.

<i>Document No.:</i>	<i>Issue:</i>	<i>Supersedes Issue:</i>	<i>Date:</i>	<i>Page:</i>
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-6

3.13.4 Multi-Function Display Failure

1. Circuit Breaker PFD RESET, if tripped

After restart of the MFD check the information for plausibility.

2. Circuit Breaker MFD If the MFD does not restart: OFF

The GPS-Source can be used for information to continue the flight.

4.0 Normal Procedures

4.5.3. Before Taxiing

CAUTION

The MFD can also be operated without any power supply.
The MFD use the internal battery for power supply (see Pilot's Guide EFD 1000 MFD).

4.5.3.1 Dimming the brightness of the Display

The Aspen PFD has a light sensor which adjusts the brightness of the display depending of the environmental lightning conditions.

The brightness of the display can be manual adjusted additionally via the menu. Push the "MENU" button to achieve the adjusting menu. After pushing the left turning knob the brightness can be adjusted by turning this knob. The current setup can be saved by pushing „Menu“-button. The adjustment menu will be left automatically.

4.5.5. Before Take-off

Function of artificial horizon

Check for correct setting

NOTE

The artificial horizon (ADAHRS-modul) takes few minutes for stabilization.

<i>Document No.:</i>	<i>Issue:</i>	<i>Supersedes Issue:</i>	<i>Date:</i>	<i>Page:</i>
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-7

4.5.13. Engine Shutdown

After switch-off of the power supply the shut-down of the PFD starts automatically.

NOTE

The PFD can be switched off separately by pushing the red „REV“-button.

5.0 Performance

No change to the basic Airplane Flight Manual.

6.0 Weight and Balance

No change to the basic Airplane Flight Manual.

7.0 Systems Description

NOTE

This AFM-Supplement contains the general description of the integration of the ASPEN EFD 1000-MFD into the Aquila AT01 instrument panel. For a detailed description of the EFD1000-MFD and full operating instruction, refer to the effective issue of the Aspen EFD 1000 (MFD) Pilot's Guide (P/N 091-00006-001).

The MFD will be supplied by the Avionic-bus and is protected by push-pull circuit breaker.

The circuit breaker is located in the right area of the instrument panel and is labelled by "MFD" (see chapter 2.16 of this AFM-supplement). The Avionic-bus will be activated by Avionic-switch. The avionic switch is located in the left lower area of the instrument panel. (see chapter 2.16 - Basic Aircraft Flight Manual)

8. Handling, Service and Maintenance

8.6 Handling of electronic devices-

As some voltage peaks in the electrical systems are possible during the engine start and shut-down. To save the life-time of the MFD, it is recommended to keep the PFD switched off during engine start and shutdown.

<i>Document No.:</i>	<i>Issue:</i>	<i>Supersedes Issue:</i>	<i>Date:</i>	<i>Page:</i>
FM-AT01-1010-325	A.02	A.01 (20.10.2009)	14.09.2011	AVE 25-8